配置図

直角座標法の面積表を作成する方法を教えてください。

A

「表」メニューの「直角座標法敷地面積表」で作成できます。

		旉	女地正	缸積(证	直角』	座 標 法	5)			
番号	X 座	標 (m)	Y	座標(m)	X (n+1))- X (n-1)	倍面	積	(m)
1		16.38	0	14	4.560		-16. 208	-2	35.9	88480
2		6.08	7	17	1.133		-4. 119	-	70.5	70827
3		12.26	1	30	508		16. 208	4	94:4	73664
4		22.29	5	25	025		4. 119	1	03.0	77975
基準		6.37	0		0.010	倍面	積計	2	90.9	92332
敷ು	1 面積	(m)						1	45.4	9

1

「表」メニューから「直角座標法敷地面積表」を選びます。



23

敷地座標入力をしたときの基準点をクリックします。 ※ 基準点がわからない場合は任意の点をクリックします。

各点の X 座標、Y 座標を確認し「XY 座標変換」を ON にして、「OK」をクリックします。 ※ 基準点がわからない場合や、敷地を移動、回転をしている場合は座標値が変わるため手入力して ください。





・敷地座標入力をするときの座 座標値が変わるため、表の座 ・「表」メニューの「敷地座標	॒ ☞標値(法」て	が入力範 は手入力 ご作成した	囲を超えて する必要だ き敷地座標	こ設定し [、] がありまう を選択し	てい す。	ると、 5、直	相対座	₹ まの	に置き換れ D敷地面積	つります。 表を作成で	<u>*</u> きます。
數 地 座 標			敷地面積表	(直角座標法							
番号 X座標(m) Y座標(m)	敷地座標										
1 14. 560 16. 380	番号	X座標(m)	Y座標(m)	X(n+1)-X(n-1)			1		1.1.1	4.1	i i i
2 17 17 3 6.087	1	16.380	0 14.560	-16.2		敷 地			地面積(直角	面積(直角座標法)	
3 30 508 12.261	3	12.261	30.508	16.2		番号	X座標(n)	Y座標(m)	X (n+1) -X (n-1)	倍面積(㎡)
4 25. 025 22. 295	4	22.295	25.025	4.1		1	16	380	14.560	-16, 208	-235.988480
基準 10.010 6.370						2	6	087	17.133	-4. 119	-70.570827
					<u> </u>	3	12	261	30.508	16.208	494. 473664
	倍面積	₽	290.992332 (m²)	ſ		4	22	295	25.025	4. 119	103.077975
	面積	≣†	145.49 (m²)	(基準		370	10.010	倍面積計	290.992332
						敷地	面積(m)				145.49
	⊢ Y⊠ ▼ XY	崔標差分で計算 「座標変換	□ 方位考慮	□ 數址							
	ОК	キャンセル									