地籍計算・CAD

地番境界点の回り方向を変更するにはどうしたらよい ですか。

地番管理の [特殊編集] – [入力方法変更] で変更してください。

1

回り方向を変更したい地番を選択します。

【地番専用(地番管理)]タブー[地番編集]グループー[特殊編集] – [入力方法変更]をクリッ
 クします。

	ファイル	地番	専用(地番管理)	お気に入り(地番管理	里) グループ編集	共	通 セル	♀ ヘルプ・
	見場	- ○ 座標管理	地番管理 成果管理	里 多角計算 测量計算	↓ ↓	特殊新	 ↓ 外周 ~ ↓ 外周 ~ ↓ 図郭 ~ ↓ 図郭 ~ ↓ 地番名 	✓構 計地 V-ト ╬地
	*1>				=¥	結線登録	ţ	
6	H- HALA	ĔNia 배포ク ···································			第64 (48:01)	→ 構成点編集		
	1	913-1	001 ●田 -	· 0002 字〇西			而猛调整	c.
-	-							1
	3	914-1	001 ●田 -	· 0002 字〇西		1R	地蕃結縁登録	5
	4	916-2	001 ●田 -	· 0002 字〇西		*	構成辺の属性変更	
	5	915-3	001 ●田 -	· 0002 字〇西			公図地番抽出	Ē.
	6	921-1	001 🛛 🖽 -	· 0002 字〇西			第里線によい占	*thu
	7	919-1	001 ●田 -	· 0002 字〇西	2)	重介級に近い黒	
	8	920-1	001 🛛 🖽 -	- 0002 字〇西		S	入力方法変更	
	9	922-1	001 ●田 -	- 0002 字〇西			77#	
	10	923-1	001 🛛 🖽 -	- 0002 字〇西			27 27	
	11	924	001 • 🖽 -	- 0002 字〇西		1-1	合単	E
	12	925-2	001 🛛 🖽 -	- 0002 字○西		1/2	地番情報移動	
	13	925-1	001 • 🖽 -	· 0002 字〇西		15	±1+	
	14	917-1	001 🛛 🖽 -	- 0002 字○西		+		6
	15	917-3	001 ●田 -	- 0002 字○西		1	法編集	ŧ
	16	917-2	001 🛛 🖽 -	· 0002 字〇西		₹.	法削除	1
	17	926-4	001 ●田 -	001 ●田 - 0002 字〇西		1	コーノルターからのいいわけけ	
	18	926-1	001 🛛 🖽 -	0002字〇西			ノアイル石からのり	UPITIN
	19	927-1	001 ●田 -	- 0002 字〇西		1	リンクファイルの名	称変更
1	20	000 1	001 = III				p	074 1147

回り方向を設定します。 ここでは、[右回り化]を選択し、左回りの地番を右回りに変更します。

